



## **1000F, 1250K, and 1250H Series Sprinkler Carts**

Thank you for purchasing a wheeled sprinkler cart from BigSprinkler.com. These carts are a quick and affordable solution for irrigating larger areas such as gardens, yards, playgrounds, sports fields, horse riding arenas, acreages, and much more!

The following manual is a guide for assembly, setup, and operation of your new BigSprinkler cart. Please read and follow all instructions carefully.

We also offer accessories such as pre-made hose kits with quick connects for easy hook-up and booster pumps that will greatly enhance pressure and performance for your sprinkler cart. For information on our automatic traveling irrigation systems, visit [www.microrain.net](http://www.microrain.net).



## **CART ASSEMBLY INSTRUCTIONS**

### **1000F, 1250K, and 1250H Series Sprinkler Carts**

Please read this manual carefully and follow all safety and assembly instructions below to ensure that your cart is assembled correctly and operates properly upon start-up. If you have any questions please call 405-354-6925.



### **Safety**




Safety is the main priority and failure to follow these instructions may cause serious injury. BigSprinkler.com is not responsible for product failure, property damage, or personal injury if these procedures and operation instructions are not followed.

- **Beware of electric power lines**  
Irrigation water should never contact electric power lines or any other power source. Never let any part of the sprinkler cart or any irrigation fittings or pipe come in contact with an electric power source.
- **Use caution up close to operating sprinkler heads**  
Pressurized water from the sprinkler head could cause serious damage to people or objects. Never allow small children to play close to operating sprinkler heads!

## **Assembly**



**Step 1**

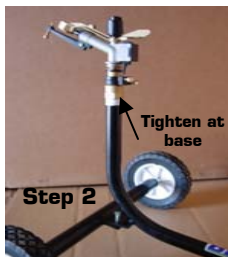

**Step 2**



**Step 3**

**Step 1)** Unpack contents from box. The sprinkler cart is shipped with three main components; axle assembly with wheels (1250K and 1250H you will need to mount wheels onto axle w/hardware supplied), cart body, and sprinkler head. First, assemble axle assembly to main body (left image) with the two 3/8" bolts and locking nuts included in package. Use a standard 9/16" socket and open end wrench to tighten bolts and secure axle assembly to main cart body.


**Step 2)** Attach sprinkler head to the cart body (left image) as shown. Secure sprinkler head by tightening with an open end wrench or pipe wrench. **CAUTION:** Only tighten sprinkler head by placing wrench on the lower base area of the sprinkler head to avoid damage to upper portion of the sprinkler.

**Step 3)** Position sprinkler cart in area to be watered. Attach cart to garden hose. Sprinkler cart is ready for operation.


**REFER TO NEXT PAGE FOR SPRINKLER HEAD SETTINGS**

## Sprinkler Head Settings

The sprinkler head supplied with your cart is a fully adjustable sprinkler that will operate in a full circle pattern or any part of a circle by adjusting the stops at the base of the sprinkler. Refer to the instructions below to set sprinkler head to the desired operating pattern.

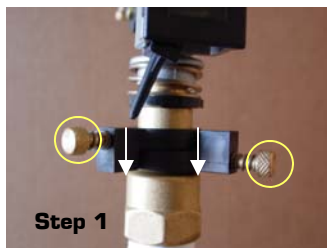


**Step 1)** For full circle operation, loosen sprinkler stop set screws as shown and slide stops all the way down the brass sprinkler base so they do not contact the reverse lever on the back of the sprinkler head. Re-tighten set screws to hold the stops in place. This will allow the sprinkler head to operate in a full circle mode.

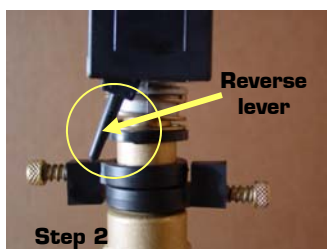

### **Step 2) IMPORTANT: REVERSE VS. FORWARD MODE**

If you set the sprinkler head for full circle operation, the reverse lever will either stay to the right or left for reverse or forward mode. Typically when using the sprinkler in full circle operation, you will want the sprinkler to be set in forward mode or a clockwise operating direction. For this to occur, you want the reverse lever at the back of the sprinkler to be over to the left as shown. If the this lever is set to the right, the sprinkler will be in reverse mode. In reverse mode, the sprinkler will operate rapidly in a counter-clockwise direction and your distance of throw will be less than it will in forward mode.

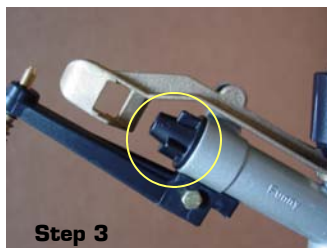

**Step 3) Nozzles Supplied:** Your sprinkler head is supplied with a set of nozzles that are interchangeable to meet your water source's capability. The nozzle sizes listed below have gallons per minute output listed at various pressures and wetted patterns that correspond. This may be a trial and error exercise to determine which nozzle size gives you the best desired performance when matched to your water source's capability. You may feel more comfortable consulting your servicing well dealer for help with your system's capability if desired performance is not being met.

It may also be necessary to purchase a booster pump from our pump section of BigSprinkler.com if pressure boosting is needed.

## Accessories



Hose - Fittings - Supply Pumps - Booster Pumps



# ***Warranty***

## **LIMITED WARRANTY AND REMEDY:**

### **WARRANTY**

BigSprinkler.com warrants to the original purchaser only of the products described in the face hereof as of the date of the original invoice, that the product is merchantable and free from defects in material and workmanship.

Warranty shall be provided by the original manufacturer of products sold on BigSprinkler.com for the length of time specified by the manufacturer of the given product.

Sprinkler stands - 1 year

Sprinkler heads - 1 year

### **REMEDY**

If BigSprinkler.com determines that the above warranty was breached with respect to any part or component provided by the manufacturer of the product (and if all conditions set forth below have been satisfied) then, BigSprinkler.com will (at BigSprinkler.com's option) provide purchaser a refund of the purchase price less the freight costs to or from the customer, or provide a replacement product of the same kind.

All remedies provided herein are for goods only, no labor or freight allowance for return goods is implied.

This warranty extends only to the original purchaser of products purchased from BigSprinkler.com.

### **CONDITIONS TO ENFORCEABILITY AND CLAIMS:**

1. Product has been maintained and operated within the guidelines outlined in the manufacturer's product guide and maintenance manual.
2. Product warranty shall be considered void if any component or function of the equipment has been altered in any form other than what has been provided or intended by the original product manufacturer.
3. Any return must be submitted on form provided by BigSprinkler.com in writing immediately and in no event longer than 20 days from occurrence. You can reach our sales department through the "contact us" form on our website should such an event occur.
4. Purchaser must return all goods within 30 days of BigSprinkler.com's authorization date, that have been determined by BigSprinkler.com to be defective to the Purchaser with Purchaser being responsible for freight.

### **LIMITATIONS:**

BigSprinkler.com or its affiliates shall not be liable for any incidental or consequential damages (including but not limited to, damages for injury to the person, property or lost turf, crops or profits) by reason of any defect in the products sold or its manufacture, design, or function.

# 1000F Sprinkler Cart Performance

## Sprinkler Performance

Nozzle size	PSI	GPM	Jet Length/Feet (One Direction)	Wetted Circle Diameter/Feet
5mm (.20")	22	5.3	42	84
	29	6	46	92
	44	7	50	100
	58	9	54	108
6mm (.24")	22	7	43	86
	29	8.5	48	96
	44	10	54	108
	58	12	58	116
7mm (.28")	22	10	46	92
	29	11	50	100
	44	14	56	112
	58	16	61	122
9mm (.35")	22	16.4	50	100
	29	19	54	108
	44	23	61	122
	58	26	64	128

**Notice:** These specifications are to be used as a guide only and have been calculated at zero wind conditions and on flat terrain. Performances can vary due to pressure, terrain, wind, and field conditions.

**Caution:** Pressures exceeding those listed in the chart above may cause cart to become unstable and possibly overturn. It is recommended to operate sprinkler only on flat terrain and within the parameters listed.



Checked box indicates this is the performance chart for model you have purchased

# 1250K Sprinkler Cart Performance

## Sprinkler Performance

Nozzle size	PSI	GPM	Jet Length/Feet (One Direction)	Wetted Circle Diameter/Feet
7mm (.28")	22	10	46	92
	29	11	50	100
	44	14	56	112
	58	16	61	122
8mm (.315")	22	13	51	102
	29	15	56	112
	44	18	62	124
	58	21	67	134
9mm (.354")	22	16	54	108
	29	19	57	114
	44	23	64	128
	58	26	69	138
10mm (.394")	22	20	56	112
	29	23	59	118
	44	28	67	134
	58	33	72	144
12mm (.472")	22	29	56	112
	29	34	62	124
	44	41	68	136
	58	47	77	154

**Notice:** These specifications are to be used as a guide only and have been calculated at zero wind conditions. Performances can vary due to pressure, terrain, wind, and field conditions.

**Caution:** Pressures exceeding those listed in the chart above may cause cart to become unstable and possibly overturn. It is recommended to operate sprinkler only on flat terrain and within the parameters listed.



Checked box indicates this is the performance chart for model you have purchased

# 1250H Sprinkler Cart Performance

## Sprinkler Performance

Nozzle size	PSI	GPM	Jet Length/Feet (One Direction)	Wetted Circle Diameter/Feet
<b>12mm (.47") w/ 5mm (.19") diffusor nozzle</b>	29	40	65	130
	44	48	78	156
	58	56	88	176
	73	62	98	196
<b>14mm (.55") w/ 5mm (.19") diffusor nozzle</b>	29	52	69	138
	44	63	82	164
	58	73	95	190
	73	81	101	202
<b>16mm (.63") w/ 5mm (.19") diffusor nozzle</b>	29	65	72	144
	44	80	85	170
	58	93	98	196
	73	103	108	216
<b>18mm (.70") w/ 5mm (.19") diffusor nozzle</b>	44	100	92	184
	58	115	101	202
	73	128	112	224

**Notice:** These specifications are to be used as a guide only and have been calculated at zero wind conditions. Performances can vary due to pressure, terrain, wind, and field conditions.

**Caution:** Pressures exceeding those listed in the chart above may cause cart to become unstable and possibly overturn. It is recommended to operate sprinkler only on flat terrain and within the parameters listed.



Checked box indicates this is the performance chart for model you have purchased