


Arc Adjustment

(if ordered with part circle sprinkler)

NOTE: The internal spring has been removed to allow the rotor head to work with lower pressure. This does not effect how the rotor operates or sprays water.

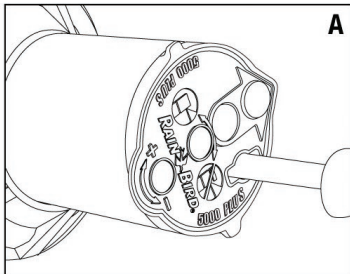


A

English Installation Instructions

Installing and Removing Nozzles:

1. Insert tool into pull-up slot, turn 90 degrees, and lift up stem. (A)
2. Insert the desired nozzle into the nozzle socket, and turn the radius adjustment screw clockwise to secure the nozzle in place. (B)
3. Insert the selected nozzle's identification plug into the opening on the top of the rotor.
4. To remove the nozzle, back out the radius adjustment screw, place the blade of the screwdriver under the nozzle removal tab and press the handle down. (C)

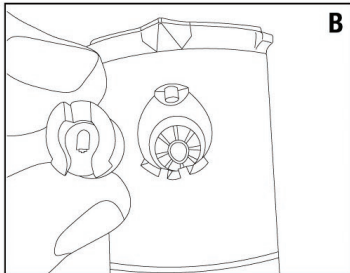


B

Setting the Arc:

The arc is adjustable from 40 –360 degrees (PC units only). The rotor is factory set to 180 degrees.

Align Fixed LEFT Edge:


1. Pull up turret and turn to the left trip point (counterclockwise).
CAUTION: If the rotor does not turn easily to the left, first turn it right (clockwise) to the right trip point.
2. Rotate entire case to the desired fixed left position, OR unscrew cap and pull out assembly. Rotate internals to re-align left trip point to the desired point and re-install.

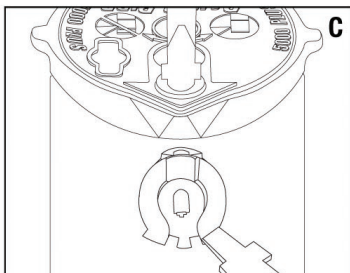


C

To increase or decrease the arc: (D)

1. While holding the nozzle turret at the fixed LEFT stop, insert tool or screwdriver into the adjustment socket.
- 2a. Turn the screwdriver clockwise, (+) to INCREASE arc.
- 2b. Turn the screwdriver counterclockwise, (-) to DECREASE arc.
3. Each full clockwise turn of the screwdriver will add or remove 90 degrees of arc.
4. When the maximum arc of 360 degrees or minimum arc of 40 degrees has been set, you will hear a ratcheting noise. Do not adjust the rotor beyond the maximum or minimum arc.

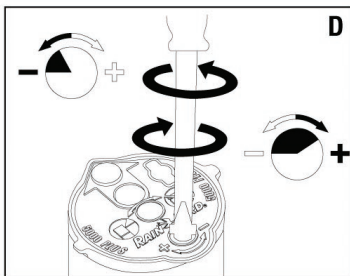

D

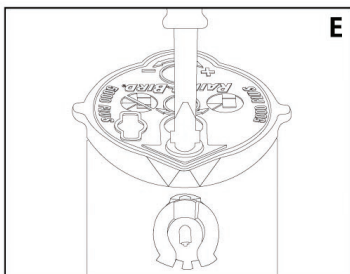

E

Radius Adjustment: (Radius can be reduced up to 25%) (E)

1. Insert screwdriver into the radius adjustment socket.
2. Turn the screwdriver clockwise to reduce radius, and counterclockwise to increase radius.

(5000 PLUS ONLY) Turning Flow On or Off (F)

1. Insert screwdriver into Flow Shut-off Slot.
2. Turn screwdriver clockwise 180 degrees to stop the flow of water.
3. Turn screwdriver counterclockwise 180 degrees to start the flow of water.



F

Warranty

LIMITED WARRANTY AND REMEDY:

WARRANTY

BigSprinkler.com warrants to the original purchaser only of the products described in the face hereof as of the date of the original invoice, that the product is merchantable and free from defects in material and workmanship.

Warranty shall be provided by the original manufacturer of products sold on BigSprinkler.com for the length of time specified by the manufacturer of the given product.

Sprinkler stands - 1 year

Sprinkler heads - 1 year

REMEDY

If BigSprinkler.com determines that the above warranty was breached with respect to any part or component provided by the manufacturer of the product (and if all conditions set forth below have been satisfied) then, BigSprinkler.com will (at BigSprinkler.com's option) provide purchaser a refund of the purchase price less the freight costs to or from the customer, or provide a replacement product of the same kind.

All remedies provided herein are for goods only, no labor or freight allowance for return goods is implied.

This warranty extends only to the original purchaser of products purchased from BigSprinkler.com.

CONDITIONS TO ENFORCEABILITY AND CLAIMS:

1. Product has been maintained and operated within the guidelines outlined in the manufacturer's product guide and maintenance manual.
2. Product warranty shall be considered void if any component or function of the equipment has been altered in any form other than what has been provided or intended by the original product manufacturer.
3. Any return must be submitted on form provided by BigSprinkler.com in writing immediately and in no event longer than 20 days from occurrence. You can reach our sales department through the "contact us" form on our website should such an event occur.
4. Purchaser must return all goods within 30 days of BigSprinkler.com's authorization date, that have been determined by BigSprinkler.com to be defective to the Purchaser with Purchaser being responsible for freight.

LIMITATIONS:

BigSprinkler.com or its affiliates shall not be liable for any incidental or consequential damages (including but not limited to, damages for injury to the person, property or lost turf, crops or profits) by reason of any defect in the products sold or its manufacture, design, or function.